

INSTRUCTION MANUAL (EN)

mill®

Series: Climate

This assembly and instruction manual applies to the following models:

TH350

Read the instructions carefully. Use and maintenance must also be in accordance with the instructions. Questions related to installation or use of the product should be addressed to the importer.

CE

Important safety information

You must follow standard safety guidelines when using electrical products, especially in the presence of children.

WARNING! To avoid electric shock or damage, always make sure that the plug is disconnected before the product is moved or cleaned.

- Read the instructions carefully.
- Make sure the product is connected to regular mains (230 V), as indicated on the product label.
- Be particularly careful if the product is used in the presence of children, the handicapped or elderly.
- Make sure the cord is situated so that nobody can trip on it.
- The product must not be used if either the cord or plug is damaged. The product must not be used if it has been dropped on the floor or is damaged in any other way which causes it to malfunction.
- Avoid using extension cords, as such a cord may become overheated and possibly start a fire.
- If the cord is damaged, it must be repaired by the manufacturer or by an authorized technician to avoid dangerous situations.
- Never touch the product with wet hands, as this may cause electric shock.
- The product must be switched off and the plug must be disconnected before the product is moved.
- Do not insert your fingers or other objects into the air outlet on the top of the product.
- Avoid overloading the mains (the circuit) where the product is connected. Pay attention if other electrical apparatus are connected to the same power outlet or circuit.
- Do not place the product in close proximity to heat sources (electric radiator, fireplace, etc.). For best results the product should be placed at least 10 cm from the wall.
- Indoor use only. Do not use outdoors.
- The product should be placed on a firm and flat surface which is at least 60 cm above the ground.
- Do not direct the steam outlet directly at the wall. It can damage the wall.
- Never move the product when it is in use.
- High humidity in a room can cause condensation on windows and certain furniture. Turn off the product if this happens.
- The product cannot be used by children under 8 years of age and persons with reduced physical or mental abilities or who lack experience and knowledge of the product, unless they are given supervision or instruction in the safe use of the device and understand the hazards involved.
- Children should not play with the device. Cleaning and maintenance should not be performed by children without supervision.
- Children under 3 years of age should be kept away from the device, unless under continuous supervision.
- Children aged 3 to 8 years are only permitted to turn the device ON/OFF, assuming the device is assembled according to the assembly instructions and the children have received instruction or supervision in the safe use of the product and understand the hazards involved.


KEEP THIS INSTRUCTION MANUAL FOR FUTURE USE!

NEVER TOUCH THE PRODUCT WITH WET HANDS OR COVER THE STEAM OUTLET

Specifications

Model	TH350
Product #	CF-2806
Color	White
Capacity	350 ml/hour
Control panel	Electronic touch
Wattage	30 W
Working area	30–50 m ²
Tank volume	4.1 liters
Speed levels	3 (low/medium/high)
Nightlight	Yes (ON/OFF)
Timer settings	2.4 and 8 hours
Dimensions (W × D × H)	17 × 17 × 28.5 cm

Description of the product

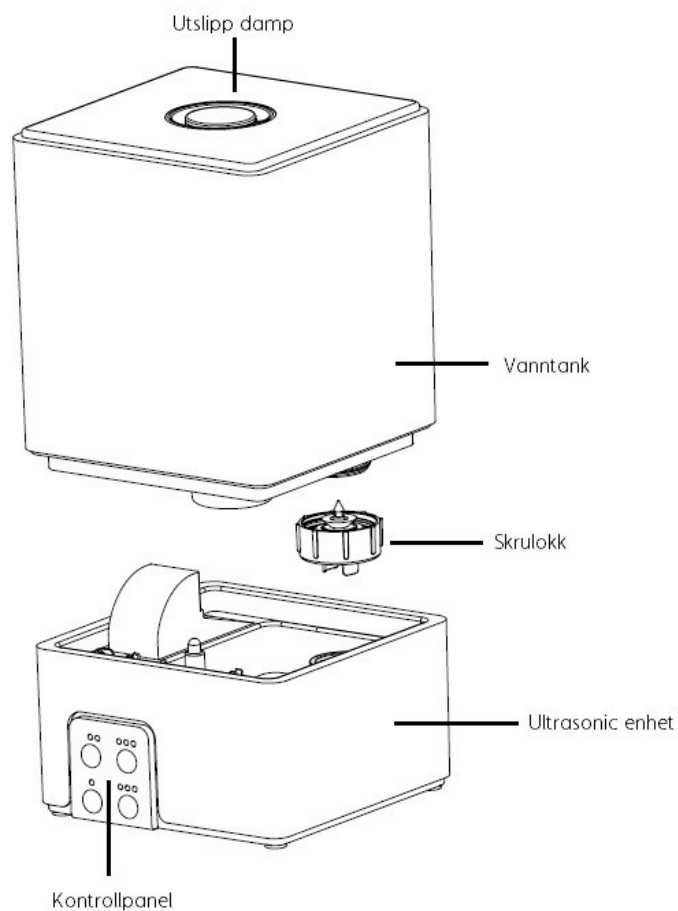


Before use

- 1) Make sure that the product is turned off and not plugged in.
- 2) Place the product on a firm and flat surface, at least 60 cm above the ground, and at least 10 cm away from the wall.
As you need to fill the product with water at regular intervals, we recommend that you think carefully about where to place the product, considering that water may be spilled on the furniture.
- 3) Fill the water tank:
 - A. Take out the water tank by lifting it straight up (see the figure on the previous page)
 - B. Remove the screw cap (turn counterclockwise) on the bottom of the water tank.
 - C. Fill the tank with cold water (Do not fill the tank with hot water because this can result in leakage)
 - D. Put on the screw cap and make sure that this fits well
 - E. Turn the water tank and put it back in the ultrasonic device (see the figure on the previous page)
 - F. The water tank will automatically deliver water to the unit.
- 4) Make sure the product is connected to regular mains (230 V), as indicated on the product label.

Instruction manual for TH350:

CAUTION! The control panel is touch-sensitive.

Control panel and use:

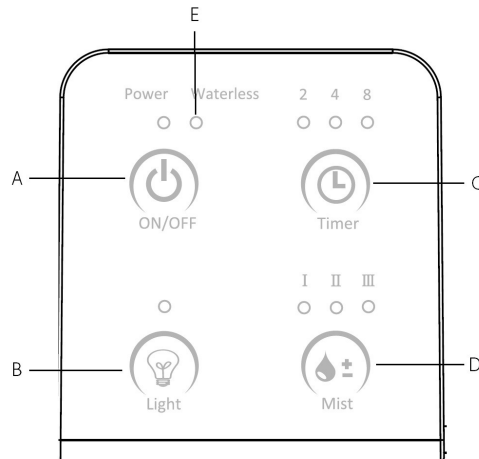

- A) ON/OFF button. Press once to turn the product ON or OFF.
- B) Nightlight ON/OFF (only visible in a dark room).
- C) Timer function (counting down until the product is switched OFF).
 - i) Press the clock to activate the timer function for either 2, 4 or 8 hours.
 - ii) For continuous operation none of the lights 2, 4 or 8 will be lit.
- D) Speed level of the fan for steam (low/medium/high).
- E) Water tank is empty (the light will flash if the water tank is empty). The product automatically turns itself off when the water tank is empty.

Troubleshooting

Please go through the troubleshooting guide to identify what can be done to correct the problem. Contact Mill International AS should the problem persist.

Problem	Cause	Corrective measure
The unit is not working	The product is not receiving power	Connect the plug to the socket and check
	The product is not switched on	Turn on the product
	The light indicating empty water tank is lit	Please fill the water tank with cold water
The steam produces an undesirable odor	New machine	Unscrew the screw cap on the water tank and leave the water tank open for 12 hours in a cool place
	Dirty water or water that has been left in the water tank for a long time	Clean the tank and fill it with clean, cold water
The control panel is lit, but the product does not switch itself on	Too much water in the ultrasonic unit	Disconnect the product from the energy source and empty water from the ultrasonic unit
Less steam than usual	The ultrasonic membrane is dirty	Clean the ultrasonic-membrane with a small brush (included). (The membrane is located in the middle of the ultrasonic device and is shiny and round, surrounded by a lot of material.)
Abnormal sound	Resonance in the water tank when the water level is low	Pour more water into the water tank
Abnormal sound	The products is unstable	Move the product to a firm and flat surface

Maintenance and storage

Make sure the power connector is unplugged before maintenance.

Daily maintenance

It is recommended that you fill the tank with fresh water every day for optimum indoor climate. Empty the water tank completely and fill it again with fresh water.

Weekly maintenance

- Fill the bottom of the ultrasonic device (center) with a cup (ca. 200 ml) of white vinegar for 15 minutes.
- Use the brush to clean any impurities (particularly from the ultrasonic-membrane in the center).
- Remove the vinegar and rinse repeatedly with cold water.

CAUTION!

- Make sure that the ultrasonic device is never submerged in water.
- Do not use aggressive detergents to clean the product.
- Use only a soft cloth to clean the inside of the product.
- Use only the included brush to clean the ultrasonic membrane. This should be done at least once a week.
- Change the water in the water tank at least once a week.


Storage

- Clean the product as described under “Weekly maintenance”. Make sure that the product is dried sufficiently.
- Store the product in its original packaging.
- Avoid high temperatures.

Warranty


The warranty is valid for 2 years. The product will be repaired or replaced during this time should any malfunctions occur. The warranty applies if the product is used according to these instructions and the customer can present a purchase receipt. In case of any product failures, please contact the store where it was purchased or the importer.

Waste disposal

The symbol  indicates that this product is not to be disposed of together with household waste. This product must be delivered to a recycling service for electrical appliances and electronic equipment. This is done to avoid health risks and prevent harm to the environment. Your local utility, business or environmental center has an arrangement to ensure the environmentally correct disposal and recycling of such products.

When submitting a claim, you have to provide the series number for your product and present the original receipt.

In case of claims or questions about the product or spare parts, contact your retailer or Mill International AS

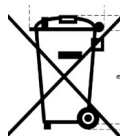

Mill International AS

Grini Næringspark 10

1361 Østerås

Tel.: +47 22 13 32 00

post@millclimate.com / post@millheat.com

facebook.com/millheat

millclimate.com / millheat.com