



IMPORTANT INFORMATION

Mill Oil heaters have an overheat protection function that will turn the heater off if it is overheated (this will most likely be due to the heater being covered at the top).

If the overheat protection is activated the heater will automatically turn off the heating element. In order to reset the overheat protection you will need to do the following:

1. Unplug the heater
2. Let the heater cool down for 45-60 minutes
3. Plug the cord back in and turn on the heater

If you have any questions, please visit our Help Desk on millheat.com or send us an e-mail: post@millheat.com