

INSTRUCTION MANUAL (EN)  
for  
**Mill HT1500**



mill®

Please read the instructions carefully before use. Take good care of this manual for later use.

CE

## Important safety information

You must obey common safety guidelines when using electrical products, especially in the presence of children.

**WARNING!** To avoid electric shock or damage due to the heat, always make sure the plug is pulled out and wait for the fan heater to cool down before it is moved or cleaned.

- The fan heater can only be used under supervision.
- Connect the fan to an outlet with the indicated voltage.
- Avoid using extension cords as this may generate heat in the cable which in turn creates a fire hazard.
- The fan should not be placed directly below a wall socket.
- The fan heater should never be used if the cable is damaged or destroyed. Have it replaced immediately by an authorized technician.
- The fan heater should always be disconnected when not in use. When you want to disconnect it, pull the plug and not the cable.
- The air input/output must never be covered. Keep a distance of at least 1 m in front and 50 cm behind the fan.
- Do not let animals or children touch or play with the fan heater. Be careful! The air outlet becomes hot during use.
- When not in use, the fan heater should be stored in a dry and cool place away from children.
- When moving and before cleaning or maintenance, unplug the cable from the mains and wait until the fan heater has completely cooled down.
- The fan heater should not be used near baths, showers or swimming pools.
- Do not use the fan heater, including the switches, sockets and outlet, with wet hands, as it may cause electric shock.
- The fan heater should never be covered, as this may cause overheating or fire.
- Do not use the fan heater in rooms with explosive gases or when using flammable solvents such as varnish or glue.
- Keep the fan heater clean. Prevent any object from entering the ventilation openings, as this may result in electric shock, fire or damage to the fan heater.
- When repaired, the fan heater should always be repaired by an authorized technician.
- The device cannot be used by children under 8 years of age and persons with reduced physical or mental abilities or lack of experience and knowledge unless they have been given supervision or instruction in the safe use of the device and understand the hazards involved.
- Children should not play with the device. Cleaning and maintenance should not be performed by unsupervised children.
- Children under 3 years of age should be kept away from the device, unless they have continuous supervision.
- Children aged 3 to 8 years are only permitted to turn the device ON/OFF, assuming the device is mounted according to the assembly instructions and the children have received instruction or supervision in the safe use of the device and understand the hazards involved.

## STORE THIS INSTRUCTION MANUAL FOR FUTURE USE!

### Instruction Manual

#### Description of the control panel

Symbol	Function
OFF	Turn off the fan heater
FAN	Fan (only fan, no heating)
I	Power level 1 (750 W)
II	Power level 2 (1500 W)

Thermostat wheel: Turn the wheel to set the desired temperature.

#### Using the heater

Connect the power cord to an outlet with the indicated voltage.

#### Using only the fan function

1. Turn the switch from OFF to FAN.
2. If the fan does not start, it is because the room temperature is higher than what the built-in sensor in the oven is set to. Turn the thermostat wheel gradually clockwise, so that the fan starts.
3. The red light indicates when the heater is in use.

#### Power level and thermostat

4. Turn the switch to I (750 W) or II (1500 W) to set the heating function on the heater. The red light indicates when the heater is in use.
5. Mechanical thermostat:
  - a. Turn the wheel clockwise to set the desired temperature.
  - b. The heater will go into standby mode when it has reached the desired temperature.
  - c. Once the detected temperature is below the desired temperature, the heater will automatically start up again.
  - d. **CAUTION!** You will hear a low "click" when the detected temperature is the same as the desired temperature.

**Maintenance**

1. Before cleaning, always unplug the heater and leave it to cool.
2. Wipe the heater regularly with a damp cloth and dry the surface before turning on the heater again.
3. The heater must be cleaned at least once a month during the heating season.

**CAUTION! The heater should never be immersed in water.**

**Avoid using detergents to clean the heater.**

**Never let any water get inside the heater; this can be hazardous.**

4. Dust etc. should be removed with a soft cloth.
5. The heater should be stored in a dry and clean place.
6. If the heater stops working, do not attempt to repair it yourself because it can cause a fire hazard and/or electric shock.

**Technical specification**

Model no.	HT1500
Voltage	220–240 V~
Frequency	50 Hz
Current	750/1500 W

## Warranty

The warranty is valid for 2 years. The heater will be repaired or replaced during this time should any malfunction occur. The warranty applies if the heater is used according to these instructions and the customer can present a purchase receipt. If the heater malfunctions in any way, please contact the store where it was purchased or the importer.

## Waste disposal

In accordance with the European Directive regarding electronic appliances (Waste Electrical and Electronic Equipment – (WEEE)), please return any electrical equipment that is no longer needed.

This symbol indicates that the appliance cannot be handled as normal household waste, but should be delivered to a designated collection point for recycling electronics and electrical appliances.



**Mill is distributed by:**

**Novaplan AS**

Grini Næringspark 12

1361 Østeras

Tel.: +47 22 13 32 00

[www.novaplan.no](http://www.novaplan.no)

[www.millovn.no](http://www.millovn.no)

