




Oil Premium Illustrations


mill®




1. DESCRIPTION OF THE HEATER

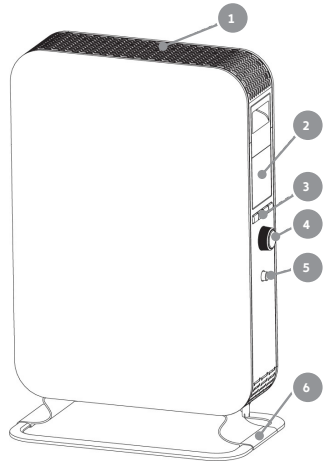


2. PARTS

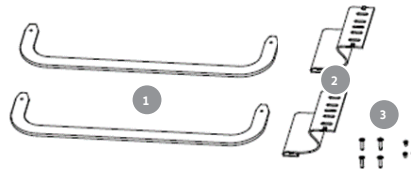


3. ASSEMBLY

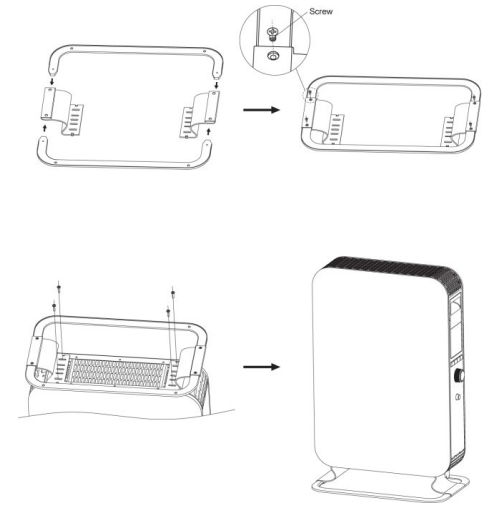


4. INSTRUCTIONS DAY/NIGHT THERMOSTAT

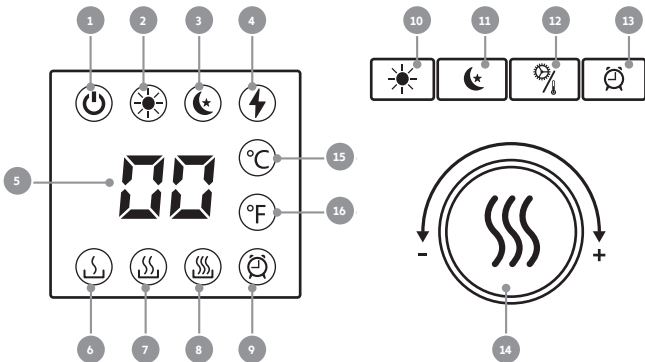

5. USAGE DAY/NIGHT THERMOSTAT

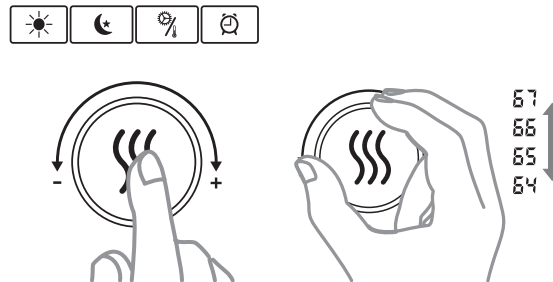


6. TIMER FUNCTION

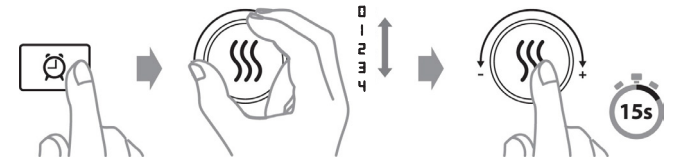





7. HOW TO ACTIVATE DAYTIME SETBACK

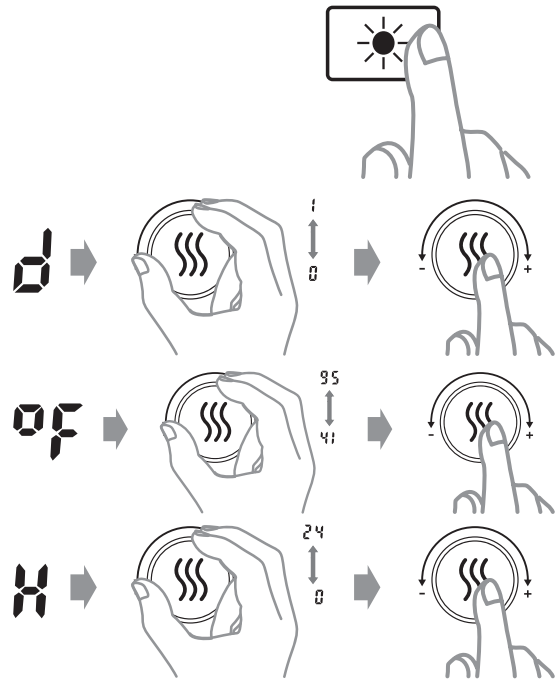


13. CANCEL (SKIP) SETBACK PERIOD

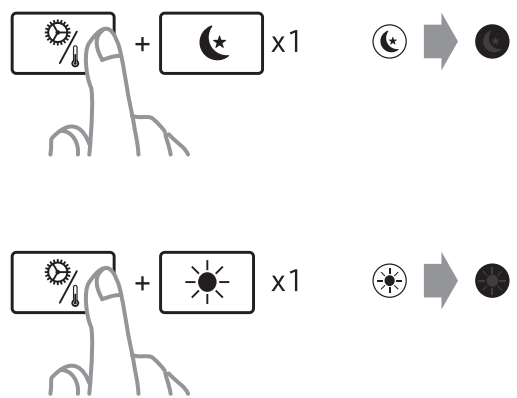


8. HOW TO ACTIVATE NIGHTTIME SETBACK

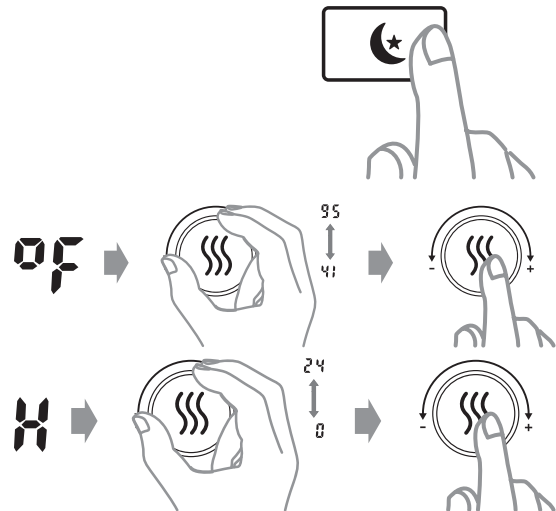

14. DELETE A SETBACK PROGRAM

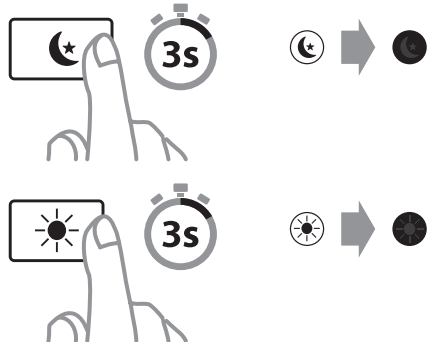

16. RESETTING THE HEATER

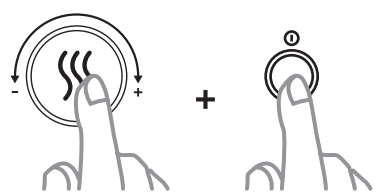

9. CHANGE SETBACK TEMPERATURE – DAYTIME



10. CHANGE SETBACK TEMPERATURE – NIGHTTIME



11. CHANGE NUMBER OF HOURS – DAYTIME



12. CHANGE NUMBER OF HOURS – NIGHTTIME



15. TEMPERATURE CALIBRATION

